

TAPE 1/2 INCH

Atlantic

WIMDOWS

TAPE 1/2 INCH

Installation Guide

- 1 Remove Shipping Blocks.
 - 2 Make sure the window is closed and locked.
 - 3 Place shims on the sill of the opening.
 - 4 Using a high quality caulking, caulk the top and sides of the opening. On the bottom sill it is recommended to use formable flashing.
 - 5 PVC window frames have flexibility. Take precautions to ensure they are absolutely straight during installation.
 - 6 Make sure window is plumb and square before fastening to the studs.
 - 7 If fastening with anchor brackets, attach one bracket per side using screws. Before continuing, check for squareness and plumbness. Then proceed with the shimming process. (If using the nail fin to fasten also use one of the two recommended methods - Anchor brackets or Predrill).
 - 8 Use nail fin temporarily to hold in place
- Check the operation of the window before continuing with the installation of the anchor brackets.
- a. Alternative method: Screw directly through the window frame (and shims) into studs using the predrill holes provided upon request. Jamb covers or glass stops may need to be removed to gain access to proper predrill locations.
 - b. Apply fiberglass installation or low expansion foam between the window and the opening. (Do not Overfill) Excessive foam type insulation may cause bowing. Secure window using anchor brackets or predrill method.

Installation is now complete

* Proper installation is critical to ensure that the window operates properly. Improper installation may cause air leakage, water leakage or stress on the hardware or PVC. Warranty is dependent on proper installation.

NOTE: When installing double or triple units where the sill is not level, shim the sill directly under T-mullion or mullled areas. It is important that this shim is not to be removed.

Window Care and Maintenance Guide

- **Caring for Glass**
 - Use normal household glass cleaner and tilt or open the sash for easier cleaning.
- **Caring for Vinyl Surfaces**
 - Vinyl is easy to clean and requires only diluted dish detergent to clean and retain its shine. Dust and pollution dirt is normal and easily cleaned. Do not use abrasive cleaners, solvents or stripping compounds. For tough marks or dirt, try non abrasive kitchen cleaning creams or automotive cleaners. Some marks such as felt tip pens penetrate the surface and should be professionally removed.
- **Caring for Moving Parts**
 - Regularly clean accumulated dust, sand, leaves and dirt from all recesses and guides. In spring and fall lubricate all moving part contact points with a light spray of silicone lubricant. Do not loosen or disassemble any parts.

*Always be careful to protect your skin, eyes and face when using strong cleaners.

AA


Atlantic

WINDOWS

49 EAST MAIN STREET
PORT ELGIN, NB
E4M 2X9




CASEMENT

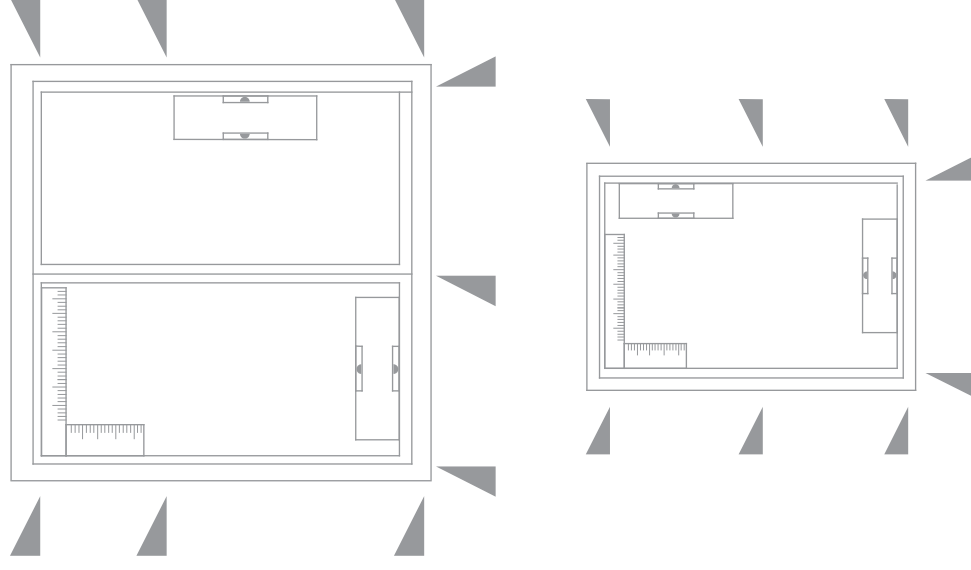

SINGLE HUNG, DOUBLE HUNG,

SLIDER

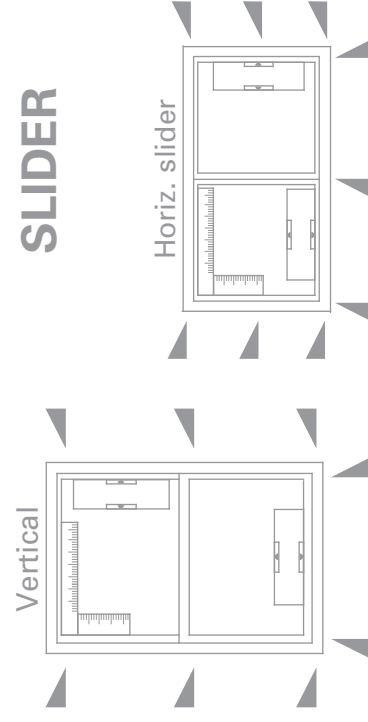

Make sure to square, level and shim at all areas designated.

